


# HECHT<sup>®</sup> 946

made for garden

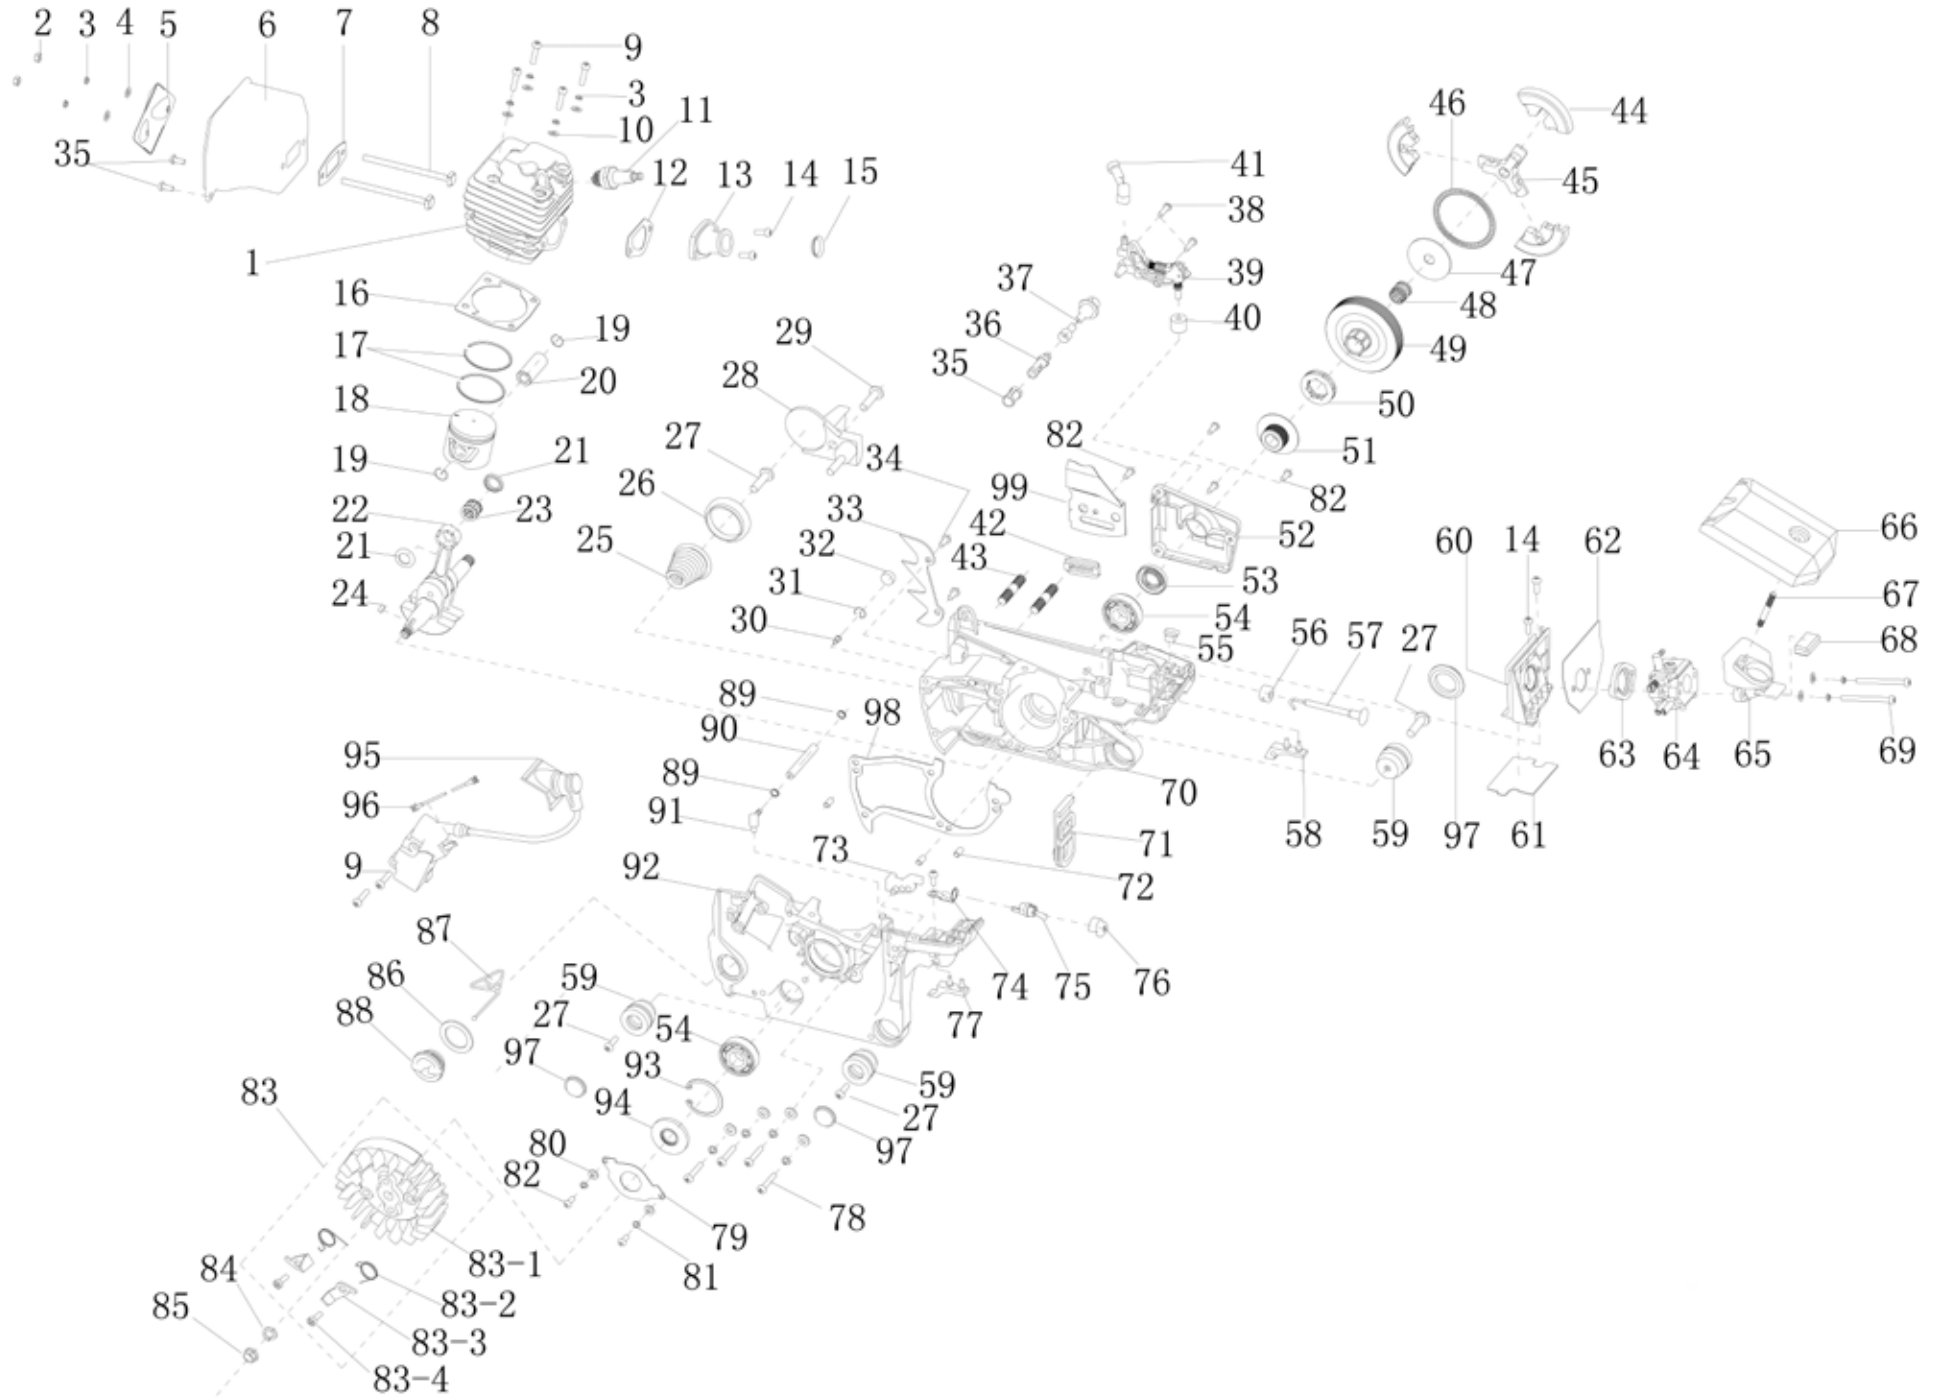

Pos.	obj. číslo		English Name	
1	945101	YD45.01.02-1	cylinder	1
2	945070	GB/T6186	nut M5	2
3	945073	GB/T93	washer 5	15
4	945076	GB/T97.1	washer 5	2
5	945123	YD45.01.09-1	muffler cover plate	1
6	945122	YD45.01.09.01-00	muffler body	1
7	945032	YD45.01.00-2	muffler sealing plate	1
8	945054	YD45.01.00-24	muffler connecting screw	2
9	945063	GB/T70.1	screw M5x20	6
10	945077	GB/T848	washer 5	11
11	945133	YD45.01.11.04-00	spark plug	1
12	945102	YD45.01.02-2	air intake tube seal. plate	1
13	945100	YD45.01.02.01-00	air intake tube	1
14	945103	GB/T818	screw M5X12	4
15	945047	YD45.01.00-17	hold coil	1
16	945031	YD45.01.00-1	cylinder sealing plate	1
17	945109	YD45.01.03-2	piston ring	2
18	945108	YD45.01.03-1	piston	1
19	945111	YD45.01.03-4	piston pin circlip	2
20	945110	YD45.01.03-3	piston pin	1
21	945112	YD45.01.03-5	needle bearing ring	2
22	945105	YD45.01.03.01-00	crank shaft components	1
23	945106	YD45.01.03.02-00	needle bearing 11x15x12.5	1
24	945078	GB/T1099	semicircular key 3x3.5x10	1
25	945014	YD45.00.00-4	conical spring base	1
26	945013	YD45.00.00-3	conical spreader base	1
27	945018	GB/T845	tapping screw ST5X16	4
28	945009	YD45.00.00.01-00	chain shield	1
29	945017	GB/T818	screw M5X16	1
30	945090	YD45.01.01.02-2	aeration jet	1
31	945091	YD45.01.01.02-3	aeration jet circlip	1
32	945052	YD45.01.00-22	sponge transition block	1
33	945051	YD45.01.00-21	pinion rack	1


Pos.	obj. číslo		English Name	
34	945067	GB/T818	screw M5X10	5
35	945059	YD45.01.00.04-2	oil filter screen	1
36	945058	YD45.01.00.04-1	oil filter	1
37	945042	YD45.01.00-12	oil tube	1
38	945066	GB/T818	screw M4x14	2
39	945142	YD45.01.15-00	oil pump	1
40	945053	YD45.01.00-23	sponge transition coil	1
41	945043	YD45.01.00-13	nozzle	1
42	945046	YD45.01.00-16	chain guide block	1
43	945098	GB/T900	double-screw bolt	
44	945140	YD45.01.13.01-2	shoe block	3
45	945139	YD45.01.13.01-1	retainer	1
46	945141	YD45.01.13.01-3	clutch spring	1
47	945049	YD45.01.00-19	clutch adjusting washer	1
48	945030	YD45.01.00.10-00	needle bearing	
49	945138	YD45.01.13-1	clutch shell	1
50	945056	YD45.01.00-26	sprocket	1
51	945026	YD45.01.00.06-00	worm	1
52	945045	YD45.01.00-15	cover plate	1
53	945029	YD45.01.00.09-00	oil seal 15x28x4.5	1
54	945095	GB/T276	bearing 6202D grade	
55	945038	YD45.01.00-8	cushion block	1
56	945037	YD45.01.00-7	choke rod fixation root	1
57	945023	YD45.01.00.03-00	choke rod	1
58	945041	YD45.01.00-11	right shock block	1
59	945027	YD45.01.00.07-00	shock seat	3
60	945021	YD45.01.00.01-00	air intake tube support	1
61	945034	YD45.01.00-4	tie plate	1
62	945033	YD45.01.00-3	sealing plate of air intake sup.	1
63	945044	YD45.01.00-14	air intake tube flange	1
64	945117	YD45.01.06-00	carburetor	1
65	945022	YD45.01.00.02-00	air intake socket	1
66	945118	YD45.01.08-00	air filter	1

Pos.	obj. číslo		English Name	
67	945079	GB/T899	double-screw bolt	1
68	945035	YD45.01.00-5	cushion of air intake socket	1
69	945069	GB/T818	screw M5X50	2
70	945089	YD45.01.01.02-1	right case	1
71	945036	YD45.01.00-6	dust plate	1
72	945094	GB/T119.2	pin 5x10	3
73	945039	YD45.01.00-9	shock block2	1
74	945135	YD45.01.11-2	ground strip	1
75	945132	YD45.01.11.03-00	flameout switch	1
76	945134	YD45.01.11-1	flameout switch socket	1
77	945040	YD45.01.00-10	left shock block	1
78	945093	GB/T70.1	screw M5X25	5
79	945050	YD45.01.00-20	oil shield	1
80	945075	GB/T97.1	washer 4	2
81	945072	GB/T93	washer 4	2
82	945065	GB/T818	screw M4X10	6
83	945124	YD45.01.10.01-00a	flywheel assembly	1
83-1	945124-1	YD45.01.10.01-01	flywheel	1
83-2	945124-2	YD36.01.10.00-2	torsion rod spring	2
83-3	945124-3	YD36.01.10.00-1	pusher dog	2
83-4	945124-4	YD45.01.10.01-02	pusher dog screw	2
84	945074	GB/T93	washer 8	1
85	945071	GB/T6171	nut M8x1	1
86	945062	YD45.01.00.05-3	sealing washer 20x30x2	1
87	945061	YD45.01.00.05-2	anti-drop plate	1
88	945060	YD45.01.00.05-1	oil cover	1
89	945088	YD45.01.01.01-3	suction tube circlip	2
90	945087	YD45.01.01.01-2	suction tube 2.5X7X10.5	1
91	945084	YD45.01.01.03-00	suction jet	1
92	945086	YD45.01.01.01-1	left case	1
93	945096	GB/T893.1	shield ring 35	1
94	945028	YD45.01.00.08-00	oil seal 15x35x4.5	1
95	945130	YD45.01.11.01-00	igniter	1
96	945131	YD45.01.11.02-00	extinction conductor	1

Pos.	obj. číslo		English Name	
97	945012	YD45.00.00-2	dust cover	3
98	945085	YD45.01.01-1	case body sealing plate	1
99	945048	YD45.01.00-18	damper	1

# HECHT<sup>®</sup> 946

made for garden

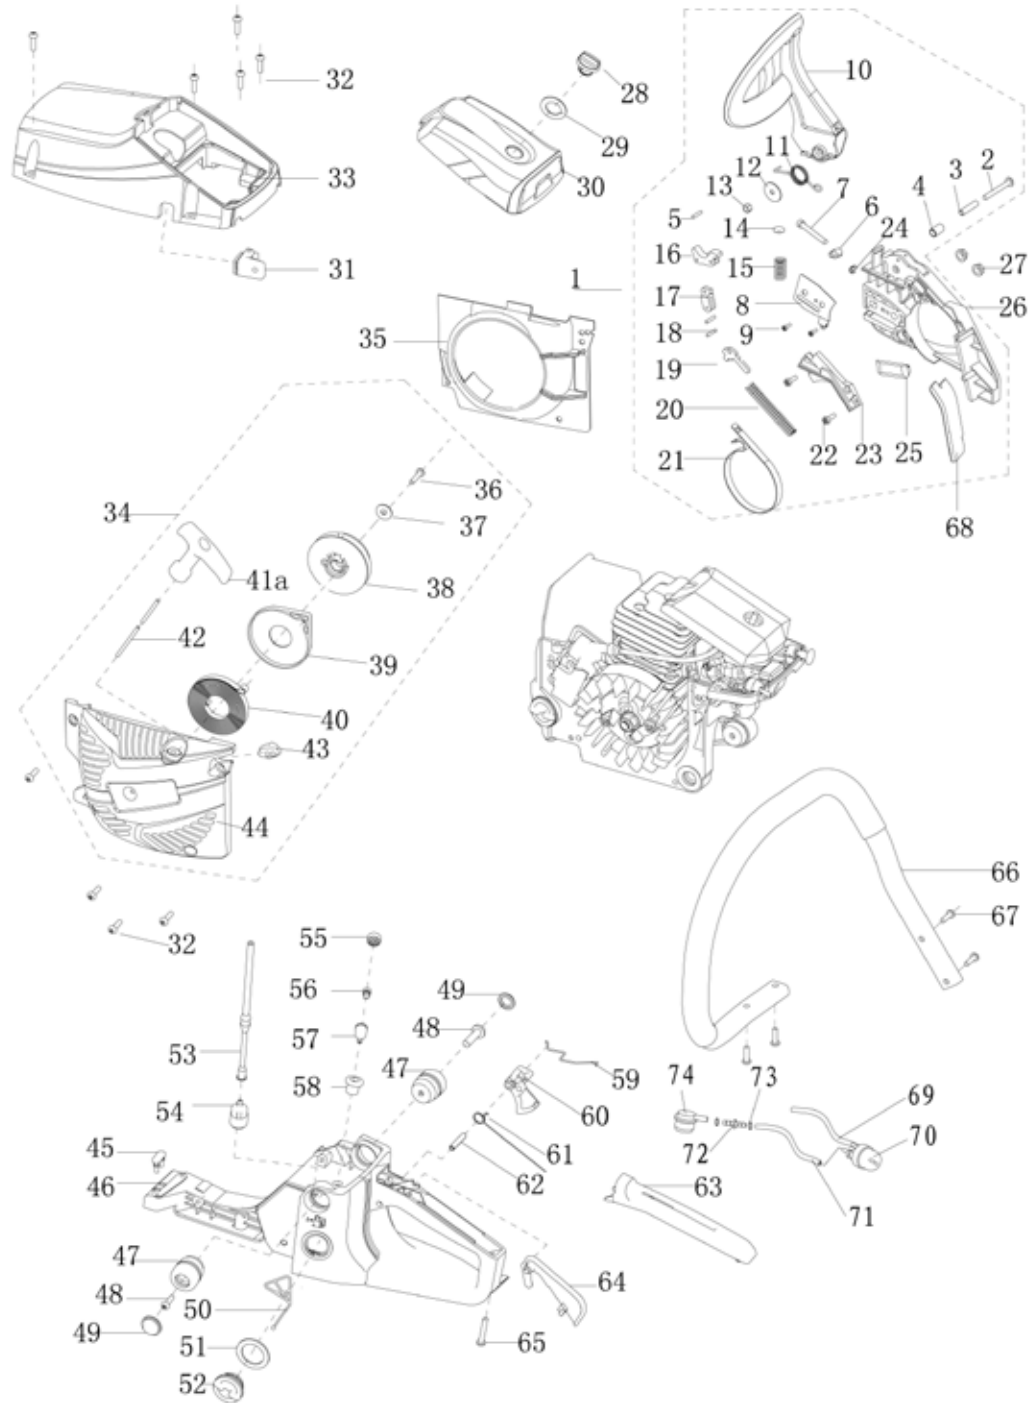

Pos.	obj. číslo		English Name	
1	946000001	YD45-5.04.00-00	right cover assembly	1
2	946000002	YD45-3.04.00-14	screw M5X36	1
3	950A03	YD45-3.04.00-12	shield pipe	1
4	950A04	YD45-3.04.00-11	pipe	1
5	950A05	GB/T119.2	pin 3 x 14	1
6	945202	YD45-3.04.00-16	tension block	1
7	945201	YD45-3.04.00-15	tightener screw	1
8	945194	YD45.04.00-11	tensioner cover plate	1
9	950A09	GB/T845	tapping screw ST4.2 X 9.5	2
10	950A10	YD45-4.04.00-2	front damper	1
11	950A11	YD45-3.04.00-8	brake torsion rod spring	1
12	950A12	YD45-3.04.00-13	washer 5.2x20x1.2	1
13	950A13	GB/T6185.1	nut M5	1
14	950A14	YD45-3.04.00-6	spring base	1
15	950A15	YD45-3.04.00-5	front damper spring	1
16	950A16	YD45-3.04.00-4	main level	1
17	950A17	YD45-3.04.00-3	secondary pull-rod	1
18	945205	GB/T119.2	pin 3x9	2
19	950A19	YD45-3.04.00-14	brake control rod	1
20	950A20	YD45-3.04.00-9	brake spring	1
21	945195	YD45-3.04.00-9	brake strap	1
22	950A22	GB/T845	tapping screw ST4.2X12	2
23	950A23	YD45-4.04.00-1	brake spring cover plate	1
24	945207	YD45-3.04.00-17	tension block	1
25	945046	YD45.01.00-16	chain guide block	1
26	950A26	YD45-5.04.01-00	right cover	1
27	945019	GB/T6177.1	nut M8	2
28	946000028	YD45.05.01-00	air filter lock nut	1
29	945213	YD45.05.00-2	lock nut washer 15x26x1	1
30	946000030	YD45-5.05.00-1	air filter cover	1
31	945016	YD45.00.00-6	idle adjusting guide set	1
32	945017	GB/T818	screw M5X16	11
33	946000033	YD45-5.00.00-1	upper cover plate	1

Pos.	obj. číslo		English Name	
34	946000034	TD45-5.02.00-00	starter assembly	1
35	946000035	YD45.02.00-1	guide flow cover	1
36	945154	GB/T818	screw M5X10	1
37	945156	GB/T96	washer 5	1
38	945147	YD45.02.00-2	starter palte	1
39	945148	YD45.02.00-3	coil spring gland	1
40	945150	YD45.02.00-5	start coil spring	1
41a	946000041	YD38-5.02.00-4	start handle	1
42	939S064	YD45.02.00-7	start stretching wire	1
43	945152	YD45.04.00-8	LH sheathing	1
44	946000044	YD45-5.02.00-1	starter cover	1
45	945162	YD45. 03. 00-1	shock rubber	1
46	946000046	YD45.03.01-00a	base	1
47	945159	YD45. 03. 02-00	shock rubber gland	1
48	950A48	YD50.00.00-9	screw	1
49	945012	YD45.00-00-2	dust cover	1
50	945061	YD38-3.03.02-2	anti-drop plate	1
51	939S008	YD38-3.03.02-3	packing washer 24X34X1.5	1
52	939S007	YD38-3.03.02-1	petrol cover	1
53	945163	YD45.03.00-2	fuel tube	1
54	945160	YD45.03.03-00	petrol filter componets	1
55	945167	YD45.03.00-7	balancer cover	1
56		YD45.03.00-6	balancer rubber	1
57		YD45.03.00-5	balancer body	1
58	950A61	YD38-3.03.00-3	balancer root	1
59	945055	YD45.03.00-25	throttle rod	1
60	945172	YD45.03.00-11	trigger	1
61	945173	YD45.03.00-12	trigger torsion rod spring	1
62	950A65	GB/T119.2	pin6X22	1
63	946000063	YD45.03.00-14	handle cover	1
64	945174	YD45.03.00-13	trigger control rack	1
65	950A68	GB/T845	tapping screw ST4.2X25	1
66	945215	YD45.06.00-00	front handle assembly	1

Pos.	obj. číslo		English Name	
67	945018	GB/T845	tapping ST5X16	4
68	946000068	YD45-4.04.00-7	dust shield	1
69	946000069	YD45-4.03.00-13	pump tube	1
70	946000070	YD38-3.00.00	Primer bulb	1
71	946000071	YD45-4.03.00-12	scavenge tube	1
72	946000072	YD38-3.00.00-3	oil tube tie-in	1
73	946000073	YD38-3.00.00-17	oil tube clip	2
74	946000074	YD45-4.03.00-11	scavenge nozzle	1
75	945L40		guide bar 16"	
	945L45		guide bar 18"	
76	25Q66E		chain	
	25Q72E		chain	
77	76106069		cover guide bar	1